

To navigate to different pages in the report use the arrow keys ① in the tool bar. The first page list overall project information while the rest of the pages lists the analysis results for the facility or facilities chosen, organized by facility type; i.e. all of the freeway facilities together, all of the multilane facilities together etc. To print the report currently being viewed, click on the *Print*② icon in the tool bar at the top of the window. The report can also be exported to a file using the *Export*③ button. Reports can export to several different file formats to be viewed or emailed at a later time, including PDF and Word .doc files.